
# Flat Panel VMT Natural Stones & Natural Woods

2380x1190x20mm

Installation Manual





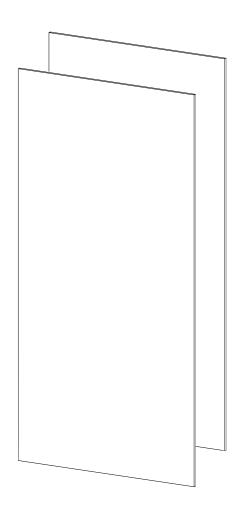


# Included





Flat Panel VMT 2380x1190x20mm x8

# **Not Included**

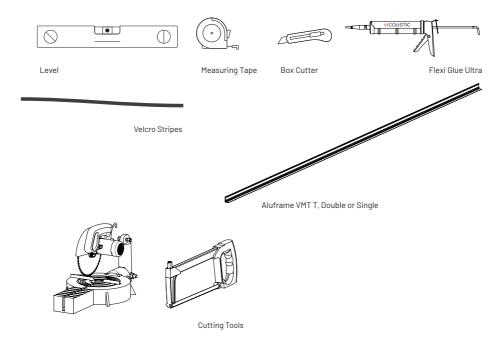



<sup>\*</sup>This product should be handled by two installers.

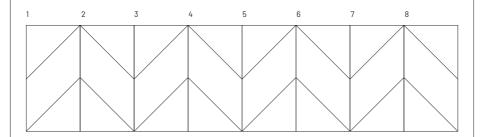

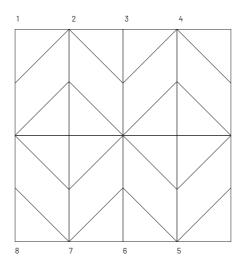


İ

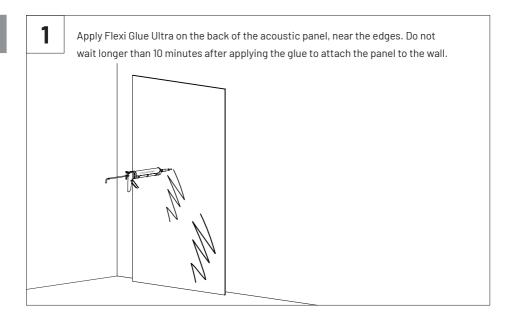


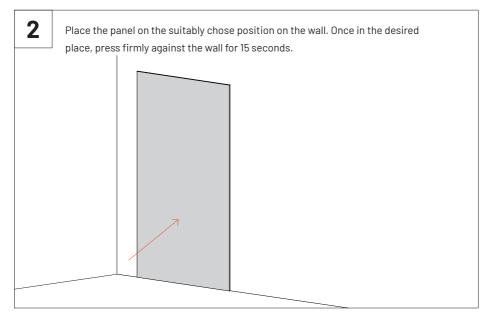


To ensure that you maximise the strength of the glue, don't make any adjustments to the panel after bonding

# Full wall installation

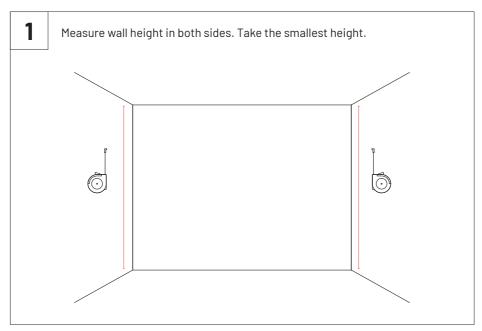


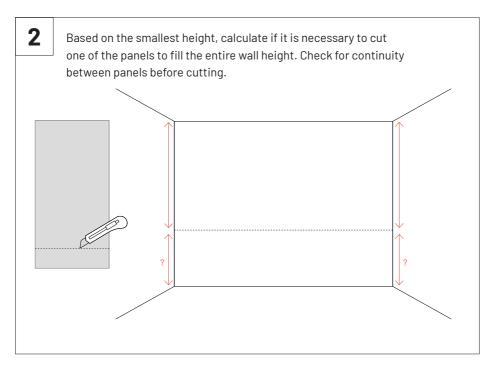

Glue the panels directly to the wall with Flexi Glue Ultra. In some cases the panels can also be installed with Velcro.

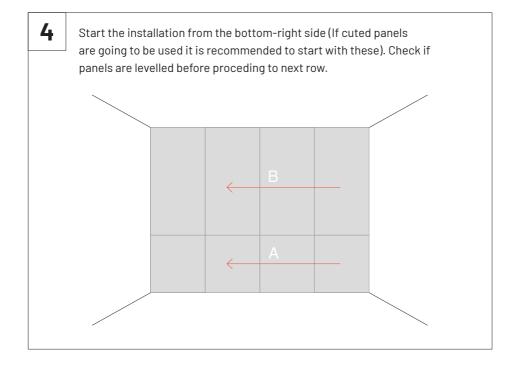

You can use the Aluframe VMT T, to hide the joints between the panels.

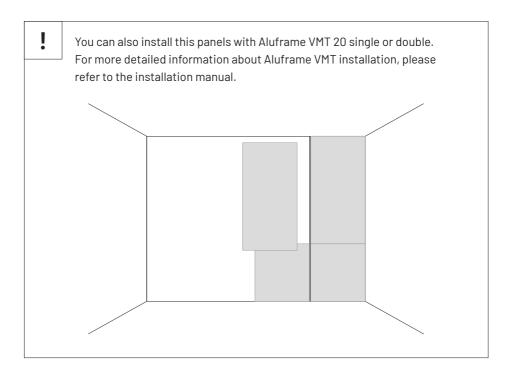

# Main Office, R&D & Logistics

Avenida do Pólo 3, Nº 159, Carvalhosa 4590-137 Paços de Ferreira, Portugal T (+351) 255 136 746

# Office

Rua Quinta do Bom Retiro Nº 16, Armazém 9 2820-690 Charneca da Caparica, Portugal T (+351) 212 964 100

# Info and Sales

E sales@vicoustic.com

www.vicoustic.com



© Vicoustic, 2019 | V1

No parts of this document might be copied and/or published without written consent of Vicoustic.